

INSTRUCTIONS: Line Voltage Precision Spot Fixture

Model: LTK-747

Caution:

Read all instructions before installing. Switch off power before installing or re-lamping.

Overview:

Fixtures are designed for use on "L" series WAC. Lighting track. They may also be used on other manufacturer's brand of track (consult factory for compatibility).


Lamping:

1. Use PAR 30 lamp, 75-watt max.
2. Remove the cap ring by twisting counter-clockwise.
3. Insert the PAR lamp by screwing clockwise into lamp socket.
4. Re-install the cap ring.

Accessories:

The LTK-747 accepts up to two accessories. The accessory lens and/or louver can be inserted into the form fitting recess. Accessory combinations could be a dichroic lens with honeycomb louver, colored lens with cross baffle louver, etc.


1. Remove the cap ring.
2. Place the new lens or louver into the recess.
3. Springs in the sidewall of the cap ring will hold the lens in place.
4. Re-install the cap ring.

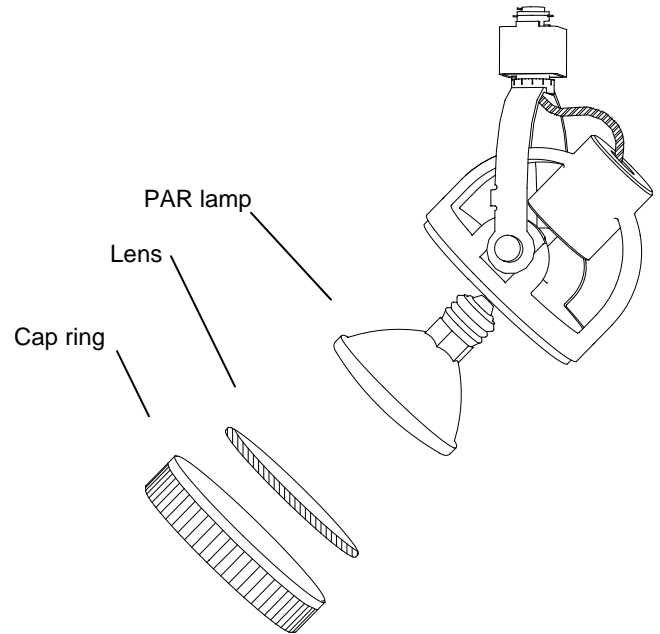

Installing Fixtures:

1. Note the track has a ridge running it's length to indicate polarity.
2. Note the slant of the locking tab.
3. Insert adapter into track slot and rotate it 90° so that the low side of the locking tab faces the ridged side of the track.
4. Make sure the locking tab seats in the track slot.
5. Removal is the reverse procedure. Tracks heads may be positioned anywhere along the track length.

Note: "L" series track accepts only WAC. track heads.

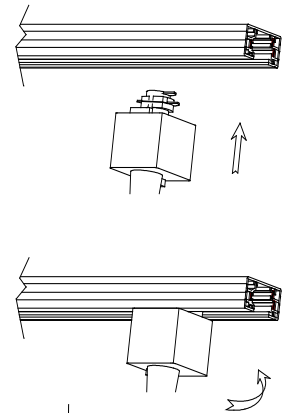

Aiming:

1. Adjust head rotation using the aiming scale below transformer.
2. Adjust vertical aiming position by tilting head to desired angle.
3. Lock fixture head into position by tightening the two aiming fittings with a small Allen wrench or screwdriver.

Retain instructions for future reference.

