

INSTALLATION INSTRUCTION

Quick Connect™ Canopy

1 Point Mirrored Round - QMP-G1RN

WAC LIGHTING

Responsible Lighting®

SAFETY INSTRUCTION


- Read all instructions.
- Do not conceal or extend exposed conductors through a building wall.
- Do not install this system in wet locations.
- For low voltage exposed insulated conductor systems required by 30.1© do not install any part of this system less than 7 feet (2.2m) above the floor.
- To reduce the risk of fire and burns, do not install this lighting system where the exposed bare conductors can be shorted or contact any conductive materials.
- To reduce the risk of fire and overheating, make sure all connections are tight.
- Do not install any luminaire closer than 6 inches (15.25 cm) from any curtain, or similar combustible materials.
- Turn off electrical power before modifying the lighting system in any way.
- SAVE THESE INSTRUCTIONS

OVERVIEW

Canopies are designed to fit all WAC quick connect fixtures. They may also be used on other manufacturers brand of quick connect (consult factory for compatibility). Uses a 50 watt max fixture or pendant. Canopies come with a self-contained electronic transformer that may be dimmed with an electronic low volt dimmer switch.

1. Loosen the three canopy screws and separate the canopy from the base plate.
2. Remove a knock out from the base plate.
3. Support canopy and guide the black and white wires and from the transformer through the knock out in the base plate and into the Junction box.
4. Connect ground wire from junction box to the green grounding wire from the base plate.
5. Connect corresponding line volt wires from the junction box to transformer wires, with wire nuts (supplied). Tuck excess wire into the junction box.
6. Attach the base plate to the junction box using the slotted holes.
7. Raise the canopy to the base plate, and tighten the three screws loosened earlier. Position the threaded tube through the center holes of both the round and rectangular base plates, then secure with the large nut. Fold any excess wire neatly into the fixture. Position the fixture against the rectangular base plate and secure the 6 perimeter screws.

Retain instructions for future reference.

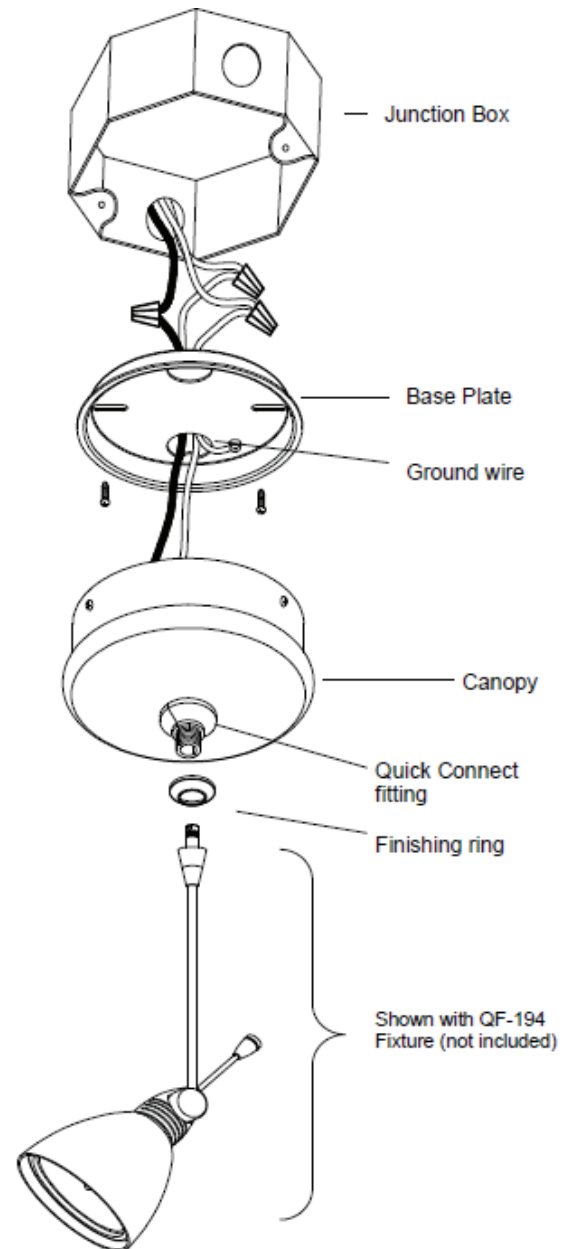

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585