

INSTALLATION INSTRUCTION

Quick Connect™ Canopy 3 Point Mirrored Round - QMP-G3RN

WAC LIGHTING
Responsible Lighting®

SAFETY INSTRUCTION


- Always turn off power at fuse box prior to installation to prevent electrical shock.
- For installation by a qualified electrician.
- Line voltage wire must be 12AWG BX or Romex wire.
- Install over a standard 4 inch junction box.
- All wires must be contained in the junction box.

OVERVIEW

Canopies are designed to fit all W.A.C quick connect fixtures. They may also be used on other manufacturers brand of quick connect (consult factory for compatibility). Uses three fixtures or pendants, 50 watt max each. Canopies come with self-contained electronic transformers that may be dimmed with an electronic low volt dimmer switch.

1. Loosen the canopy screws and separate the canopy from the base plate.
2. Remove a knock out from the base plate.
3. Support canopy and guide the black and white wires and from the transformer through the knock out in the base plate and into the Junction box.
4. Connect ground wire from junction box to the green grounding wire from the base plate.
5. Connect corresponding line volt wires from the junction box to transformer wires, with wire nuts (supplied). Tuck excess wire into the junction box.
6. Attach the base plate to the junction box using the slotted holes.
7. Raise the canopy to the base plate, and tighten the three screws loosened earlier.

Retain instructions for future reference.

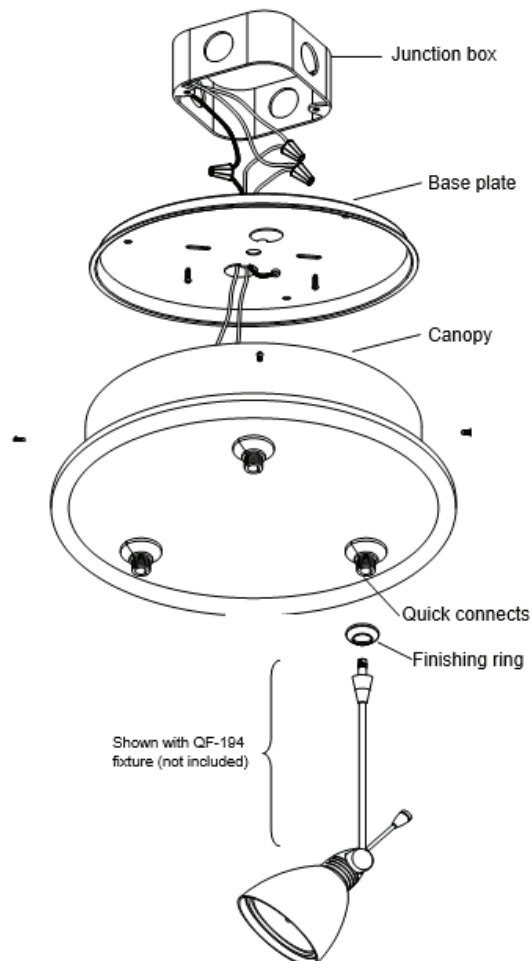

WAC Lighting
www.waclighting.com
Phone (800) 526.2588 • Fax (800) 526.2585

Headquarters/Eastern Distribution Center
44 Harbor Park Drive • Port Washington, NY 11050
Phone (516) 515.5000 • Fax (516) 515.5050

Western Distribution Center
1750 Archibald Ave • Ontario, CA 91761
Phone (800) 526.2588 • Fax (800) 526.2585