


INSTALLATION INSTRUCTOINS FOR 901

1. CONNECT WIRE FROM PHENOLIC SHIELD TO THE POWER TERMINALS OF THE PAR36 OR AR111 BULB BY MEANS OF LIGHTENING THE SCREWS.
2. GENTLY PULL BACK EXCESSIVE WIRE FROM THE BACK OF THE PHENOLIC SHIELD TO A POINT WHERE THE BULB FITS SNUGLY INTO SHIELD. YOU MAY DO SO BY SNAPPING THE BACK OF THE BULB INTO THE TWO CLAMPS LOCATED AT THE BACK OF THE SHIELD.
3. INSERT ENTIRE LAMP PIECE INTO FIXTURE AND SECURE IN PLACE WITH THE RETAINER SPRING

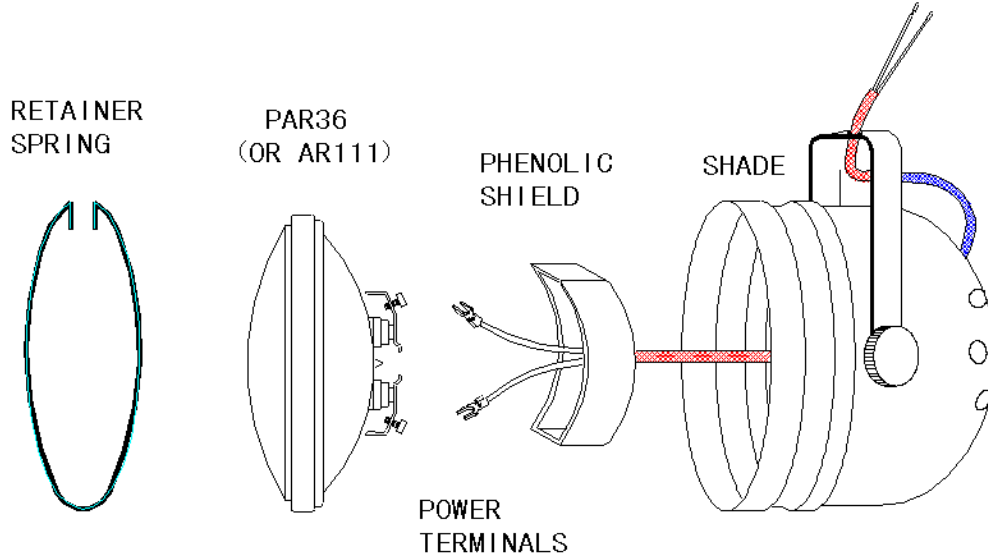

 **WAC LIGHTING**
Responsible Lighting

Retain these instructions for future service and adjustments
615 South Street, Garden City, NY 11530
Tel: (516) 515-5000 Fax (516) 515-5050
www.waclighting.com