

**INSTRUCTIONS: PLD Models  
Pendant Shade Installation**

**CAUTION**

- Always turn off power at main switch prior to installation to prevent electrical shock.


**SINGLE PIECE SHADE:**

All components screw clockwise to tighten.

1. Make certain the Nord style socket is screwed fully into the aluminum cone.
2. Note the orientation of the black threaded retaining ring in the diagram.
3. Raise the shade to the level of the Nord socket so that the threaded portion protrudes through the hole.
4. Place the leveling spring on top of the retaining ring, and screw on to the socket until the shade is snug against the aluminum cone.

**LAMPING:**

Single piece shades accept "A" or "G" type lamps 100 Watt max.

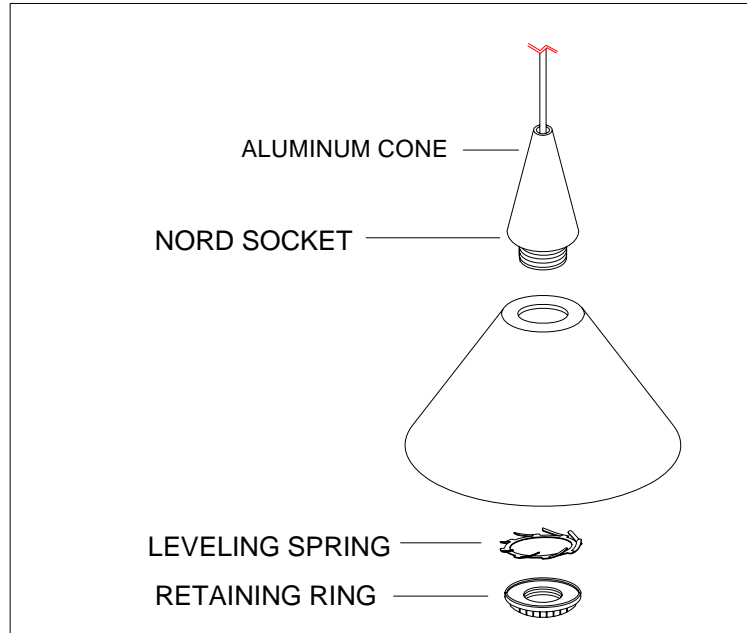

**W • A • C | LIGHTING**

[www.waclighting.com](http://www.waclighting.com)

615 South Street, Garden City, NY 11530  
Tel: (516) 515-5000 Fax: (516) 516-5050

168 Brea Canyon Road, City of Industry, CA 91789  
Tel: (909) 468-1848 Fax: (909) 468-9958

05/21/07 Rev 1